

Removal

- 1 Pull off fresh air, warm air and crankcase breather hose.
- 2 Loosen fastening nut as well as wing nut and remove air filter.

Installation

- 3 Install air filter in vice versa sequence. Pay attention to correct seat of sealing ring between carburetor and air filter and replace sealing ring, if required.

